


Trebisky® Fire Crackler Sound System

QUICK START GUIDE

Get **Crackling**:

1. Turn on(1) the speaker
2. Press (4) ⏮ or (5) ⏭ to adjust volume.
3. Use (6) SET to switch between three Fire Crackling sounds.

Note: It is recommended to charge the speaker to full using USB-C port(7) before operation.

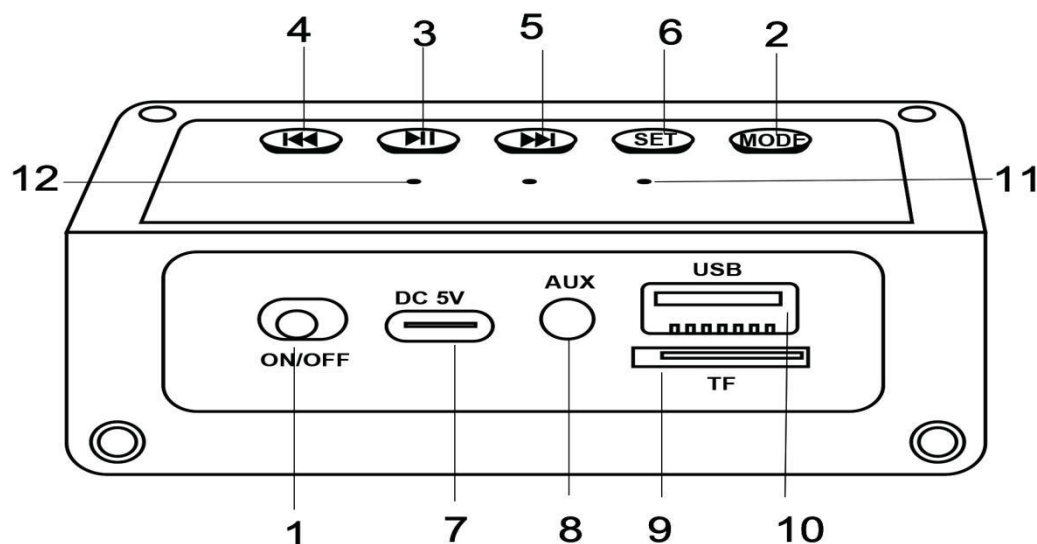

Want to hear something different? You have many options.

1. Press Mode(2) Once to change to Bluetooth mode. Use your phone to connect via Bluetooth. Find "Trebisky BTF3" and connect to it. Then use your phone to play!
2. Insert Aux cord at (8) to listen to your own music. Note that FM radio mode also requires an Aux cord to be inserted to serve as an antenna.
3. Insert a USB drive at (10) or TF/microSD card at (9) to play your own MP3 files.

Thank you for purchasing the Trebisky® Fire Crackler Sound System, feel free to contact us directly at AcologyLLC@gmail.com if you have any questions or concerns with the product.

Please help us by leaving a review at [Amazon.com/RYP](https://www.amazon.com/RYP)

Instruction Manual

Please read the user manual carefully before operation.

1. Important Safety Information

Before using the products, please confirm to follow the following basic safety tips to ensure the safe and reliable use of the products:

- Read and understand all safety guidelines.
- Follow all warnings and guidelines marked on the product. Please use a charging device that can provide an output voltage of 5V / 1a to avoid damage to the device.
- The product adopts built-in lithium battery. Please shut down when not in use.
- Do not use this product under rain, moisture, dripping or dropping of any liquid.
- Do not use this product near high-temperature heat source, and do not bake or blow dry at high temperature. Make sure the product is protected from the heat of a fireplace.
- Do not drop or hit the product, or apply heavy pressure. DO NOT put inside of the Fireplace.

2. Product Functions

- Premium non-looping fire crackling sound
- Bluetooth connection, enjoy the fun of wireless music.
- Enhanced powerful bass
- Portable speaker, full audio decoding, supports lossless music plug and play of TF and USB flash.
- Built-in high-capacity lithium battery to meet the needs of enjoyment anytime and anywhere.
- Support 3.5mm line-in audio input
- Support FM radio

3. Packing List

1. Trebisky® Fire Crackler Sound System: 1 set
2. USB charging cable: 1 set
3. Aux Cable: 1 set
4. Instructions Manual and Quick Start Guide: 1

Tips


- Please charge the lithium battery when using it for the first time.
- It is recommended to use the USB charging plug with the specification of 5V / 1a to charge the lithium battery.
- The lithium battery shall be charged at least once a month to prevent excessive discharge of the battery and reduce the service life of the battery.
- If the lithium battery is not used for a long time, it will enter the sleep state and require a longer charging time to activate the lithium battery. Before fully activating the lithium battery, it is normal for the machine to start normally due to low voltage or unstable sound.

4. Product Parameters

Category	Description
Product size	100*65*90mm
Loudspeaker	66mm

Product weight	328g
Rate power	3W
Support	TF/AUX/U-disk/FM
Frequency response	100Hz-18KHz
Rated resistance	4 Ω
Bluetooth version	BT5.0
Power Supply	Built in 1500mAh lithium battery
Power adapter	USB adapter with 5V / 1A specification is recommended
Interface	Line-in audio input
DC-IN power input	USB Type-C
FM Radio	FM frequency:87.5-108MHz

5. Key Functions

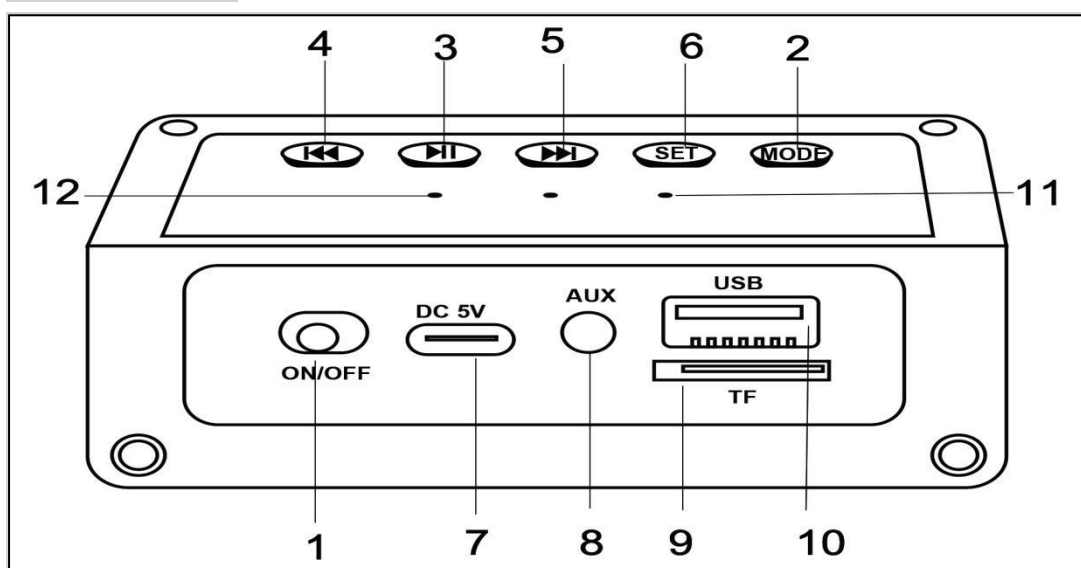

1. Power Switch
2. 【MODE】 Function mode key

	Operation	Fire Crackle	FM/TF/USB	Bluetooth/ AUX input
MODE	Short press	Mode switch	Mode switch	Mode switch
	Long press			
-⏮	Short press	Volume down 1 level	Last song	Last song
	Long press	Volume down	Volume down	Volume down
⏮	Short press	play/pause	play/pause	play/pause
	Long press	Exit Bluetooth Connection	Tune FM Frequency	
⏭	Short press	Volume up 1 level	Next song	Next song
	Long press	Volume up	Volume up	Volume up
SET	Short press	Change Crackling		
	Long press			

3. **▶||** Play / pause key

Short press: Bluetooth connection status: short press to play / pause / answer the phone; Short press the music playing status of TF card to play / pause; FM radio / AUX AUDIO INPUT playback status, short press to mute;

Long press: Bluetooth connection status: long press to reject the call; Press and hold the FM radio status for automatic station search, and the antenna (3.5 audio cable) must be inserted before station search.

4. **【VOL-◀】** Bluetooth / TF Card music / FM radio / aux audio music playback, short press to the previous song or radio station, long press to reduce the volume;

5. **【▶-VOL+】** Bluetooth / TF Card music / FM Radio / aux audio music playback, short press for the next song or the next radio station, long press the volume to increase;

6. **【SET】** In Bluetooth mode, short press the set key to dial the last dialed call;

7. DC 5V charging port

8. **【AUX】** External sound input, radio antenna input (3.5 audio cable)

9. TF card socket

10. USB flash disk interface

11. Charging indicator light; The red light is on when charging and off when fully charged

12. MIC

6. Charging Instructions

Use the attached USB cable to charge the lithium battery. One end of the USB Type-c cable is connected to the speaker "DC5V" slot, and the USB end is connected to the corresponding slot of the computer to charge the lithium battery. After charging, the power indicator light displays red, indicating that the charging is normal. When fully charged, the red light goes out.

7. Troubleshooting

- Automatic shutdown after startup: the battery is low, please charge and use it.
- Automatic shutdown or restart of playback: the voltage is too low due to insufficient battery power. Please try again after charging.
- No sound from the speaker: check whether the volume key is turned on; Press and hold a **▶▶** key to increase the volume.
- Key not functioning or function error: Restart the device.
- Unable to connect the Bluetooth function: first, determine whether the Bluetooth function is turned on (Bluetooth Mode is right after Fire crackling mode), then whether the Bluetooth device can be found on your phone, the Bluetooth name is "Trebisky BTF3", and finally determine whether the Bluetooth device is connected normally and enabled.
- No radio: A 3.5mm audio aux cable (included in the package) can be inserted as a radio antenna to boost the signal, switch to the radio mode, and press and hold the pause key for automatic channel search; Adjust the position of the machine (check whether there is radio signal in this area).
- No fire Crackle after turning on – Please reach out to AcologyLLC@gmail.com for customer service.